



1870886

 
K- Blue TV Stand

Parts and Hardware List


| | | |
|----|---------------------------|-------|
| A. | Top Panel | 1 pc |
| B. | Side Frames | 2 pcs |
| C. | Bottom Panel | 1 pc |
| D. | Shelf Panel | 1 pc |
| E. | Flat Washers | 8 pcs |
| F. | Lock Washers | 8 pcs |
| G. | Allen Head Bolts | 8 pcs |
| H. | Shelf Support Pins | 4 pcs |
| I. | Allen Head Wrench | 1 pc |
| J. | Phillips Head Wood Screws | 4 pcs |
| K. | Phillips Head Screwdriver | 1 pc |

- * Please make sure that you have all the parts and hardware indicated before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Hardware Illustrations



 G. Allen Head Bolt




E. Flat Washer



J. Phillips Head Wood Screw



 F. Lock Washer



H. Shelf Support Pin



1870886

K- Blue TV Stand

Attach Side Frames to Top and Bottom Panels

Parts required

| | | | |
|-----------------|-------|------------------------------|-------|
| A. Top Panel | 1 pc | G. Allen Head Bolts | 8 pcs |
| B. Side Frame | 2 pcs | I. Allen Head Wrench | 1 pc |
| C. Bottom Panel | 1 pc | J. Phillips Head Wood Screws | 4 pcs |
| E. Flat Washers | 8 pcs | K. Phillips Head Screwdriver | 1 pc |
| F. Lock Washers | 8 pcs | | |

1. **Attach Side Frames (B) to Top Panel (A)** Turn the Top Panel (A) upside down. Insert exposed dowels of the Side Frames (B) into the Top Panel (A). Ensure that the larger pre-drilled holes on the Side Frames (B) face the Top Panel (A). Secure with Flat Washers (E), Lock Washers (F) and Allen Head Bolts (G) using the Allen Head Wrench (I). **Insert the Phillips Head Wood Screws (J) into the pre-drilled holes of the Top Panel (A). Tighten with Phillips Head Screwdriver (K).**
2. **Attach Side Frames (B) to Bottom Panel (C)** Turn the Bottom Panel (C) upside down. Align the pre-drilled holes of the Bottom Panel (C) with the pre-threaded holes on the Side Frames (B). Secure with Flat Washers (E), Lock Washers (F) and Allen Head Bolts (G) using the Allen Head Wrench (I). See illustration #1.

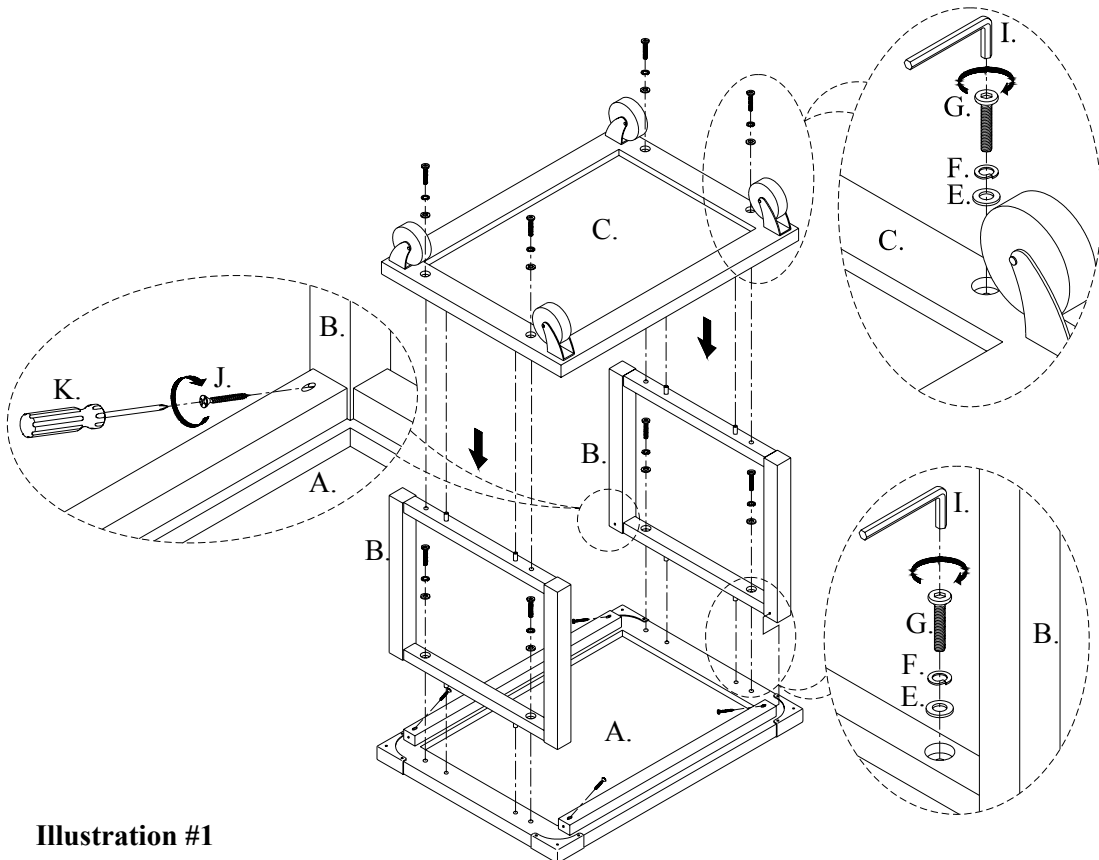


Illustration #1



1870886

K- Blue TV Stand

Attach Shelf Panel

Parts required

| | | | |
|----------------|------|-----------------------|-------|
| D. Shelf Panel | 1 pc | H. Shelf Support Pins | 4 pcs |
|----------------|------|-----------------------|-------|

3. **Attach Shelf Panel (D)** Turn the unit upright. Insert the Shelf Support Pins (H) into the pre-drilled holes on the Side Frames (B) at the desired height. Place the Shelf Panel (D) over the Shelf Support Pins (H). See illustration #2.

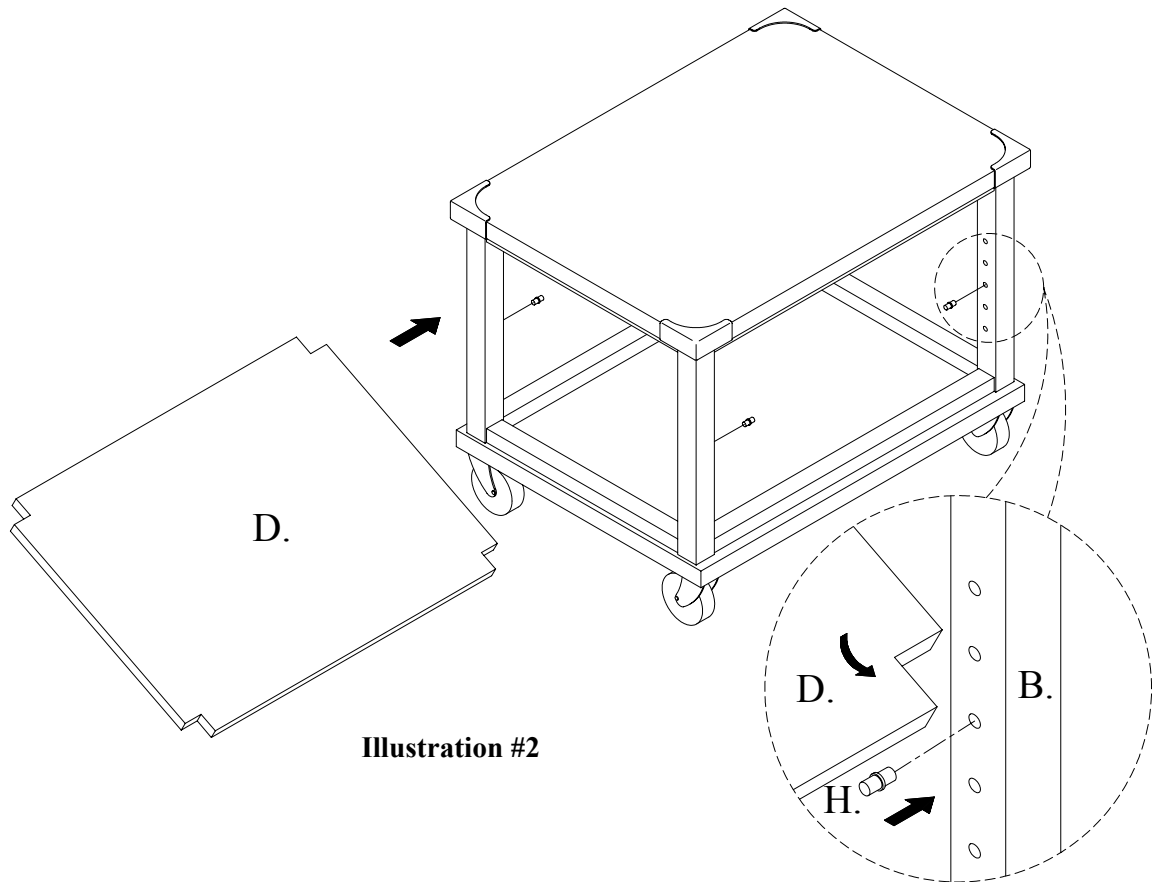


Illustration #2